

# SERVICE BULLETIN No. 158


## Electro-Touch<sup>®</sup> Control with Adaptor Harness

Part No.	Qty.	Description
08675	1	Kit
22154	1	* Electro-Touch <sup>®</sup> Control
15766	1	* Adaptor Harness

This is a Service replacement Kit for the Electro-Touch<sup>®</sup> Control Part No. 22125.

The new control harness is not compatible with the existing Harness and Fuse Assembly (15725). Therefore an Adaptor Harness (15766) has been provided for quick switch replacement without having to replace the main control harness.

**CAUTION** should be used when plugging Adaptor Harness (15766) into harness (15725). Both Male and Female ends have alignment tabs and arrows → ← to insure proper installation. Plug the new control (22154) into adaptor harness (15766). Install the two strips of Velcro tape to the mounting bracket. Attach switch control to bracket making sure that control harness is up and out of the way.

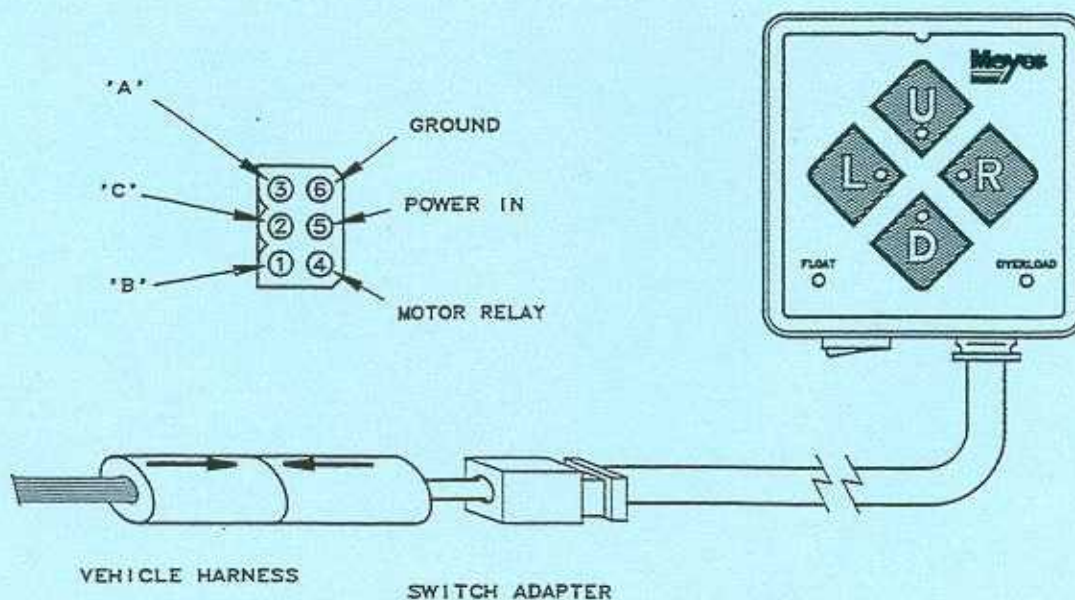

Meyer Products assumes no responsibility for installations not made in accordance with these instructions.