


SERVICE BULLETIN NO. 168

Electro-Touch® Control

Part No. 22154

On/Off Rocker Switch Replacement

Part No.	Description
22241	On/Off Rocker Switch

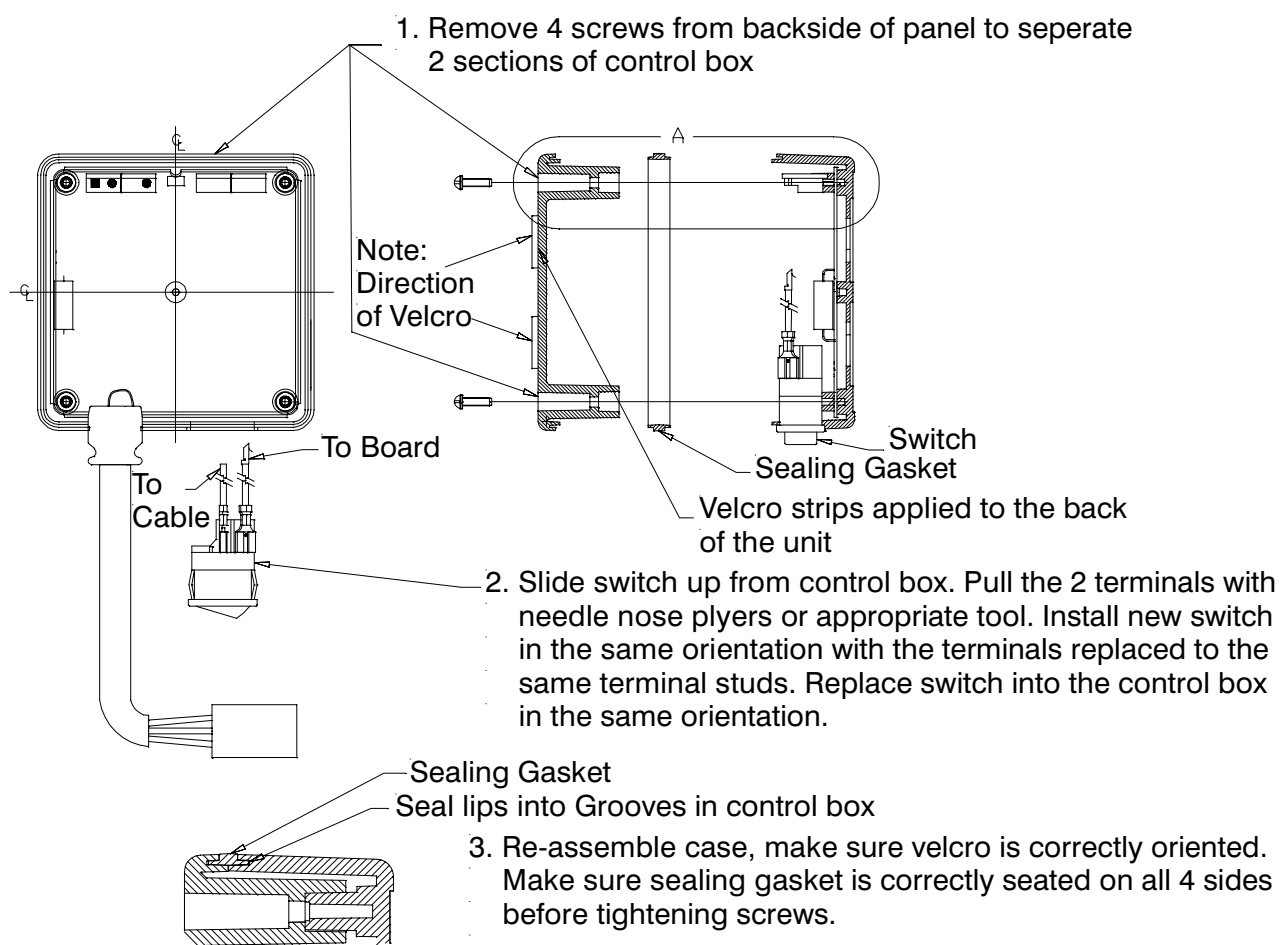

Meyer Products assumes no responsibility for installations not made according to these instructions

Meyer Products reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligation.